

HOSE FERRULES, FITTINGS & SPRING LOKS

Barrier Hose Ferrules



Easily crimped steel ferrules. (OE Sized Hose Ferrules)

FMSI #	HOSE
AC0221	#6 - 5/16"
AC0222	#8 - 13/32"
AC0223	#10 - 1/2"
AC0224	#12 - 5/8"

Reduced Barrier Hose Ferrules

Easily crimped steel ferrules. (OE Sized)



FMSI #	HOSE
AC0217	#6 - RB
AC0218	#8 - RB
AC0219	#10 - RB
AC0220	#12 - RB

Oversize Hole Barrier Hose Ferrules

Easily crimped steel ferrules. (Ferrules used in 3-step Repair Assortment AR6350)



FMSI #	HOSE
CR6306	#6 - 5/16"
CR6308	#8 - 13/32"
CR6310	#10 - 1/2"
CR6312	#12 - 5/8"

Tube Lok Fitting

Using reducing unions (FMSI #5245, 5246, 5247), stepping up or down tube sizes is easily accomplished.



FMSI #	SIZE
5252	3/8" tube to #6 hose
5253	1/2" tube to #8 hose
5254	5/8" tube to #10 hose
5255	3/4" tube to #12 hose

Female Spring Lok



FMSI #	HOSE	TUBE
5450	#6	3/8"
5454	#8	1/2"
5458	#10	5/8"
5466	#12	3/4"
5462	#12	5/8"

Male Spring Lok



FMSI #	HOSE	TUBE
5451	#6	3/8"
5455	#8	1/2"
5459	#10	5/8"
5467	#12	3/4"
5463	#12	5/8"

Female 90° Elbow Spring Lok




FMSI #	HOSE	TUBE
5452	#6	3/8"
5456	#8	1/2"
5460	#10	5/8"
5468	#12	3/4"
5464	#12	5/8"

Male 90° Elbow Spring Lok



FMSI #	HOSE	TUBE
5453	#6	3/8"
5457	#8	1/2"
5461	#10	5/8"
5469	#12	3/4"
5465	#12	5/8"

R134a REDUCED DIAMETER REFRIGERANT BARRIER HOSE & FITTINGS

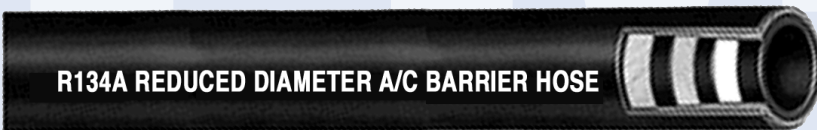

R134A REDUCED DIAMETER A/C BARRIER HOSE

For R134a, R12, REPLA 134, and other mobile refrigerants

25 Foot Coil

FMSI #	HOSE
RB516	#6 - 5/16"
RB1332	#8 - 13/32"
RB12	#10 - 1/2"
RB58	#12 - 5/8"

Hose Lok Reduced Barrier Hose Fitting

FMSI #	SIZE
5470	5/16" tube to #6 hose
5275	3/8" tube to #6 hose
5276	1/2" tube to #8 hose
5277	5/8" tube to #10 hose
5278	3/4" tube to #12 hose



Hybrid Reduced Barrier Hose Lok Fitting

FMSI #	SIZE
5472	5/8" tube to #12 hose



Metric Reduced Barrier Hose Lok Fitting

FMSI #	SIZE
5477	10mm tube to #6 hose
5478	15mm tube to #10 hose
5479	14mm tube to #10 hose
5357	12mm tube to #8 hose



90° Hose Lok Reduced Barrier Hose Fitting

FMSI #	SIZE
5365	3/8" tube to #6 hose
5366	1/2" tube to #8 hose
5367	5/8" tube to #10 hose
5368	3/4" tube to #12 hose



Tube Lok Reduced Barrier Hose Fitting

FMSI #	SIZE
5352	3/8" tube to #6 hose
5353	1/2" tube to #8 hose
5354	5/8" tube to #10 hose
5355	3/4" tube to #12 hose

Using reducing unions (FMSI #5245, 5246, 5247), stepping up or down tube sizes is easily accomplished.



45° Hose Lok Reduced Barrier Hose Fitting

FMSI #	SIZE
5375	3/8" tube to #6 hose
5376	1/2" tube to #8 hose
5377	5/8" tube to #10 hose
5378	3/4" tube to #12 hose

